

Multimedia PC


MEDION® AKOYA® E4060 D (MD8369)

MEDION®




Instruction manual

Rear Connectors

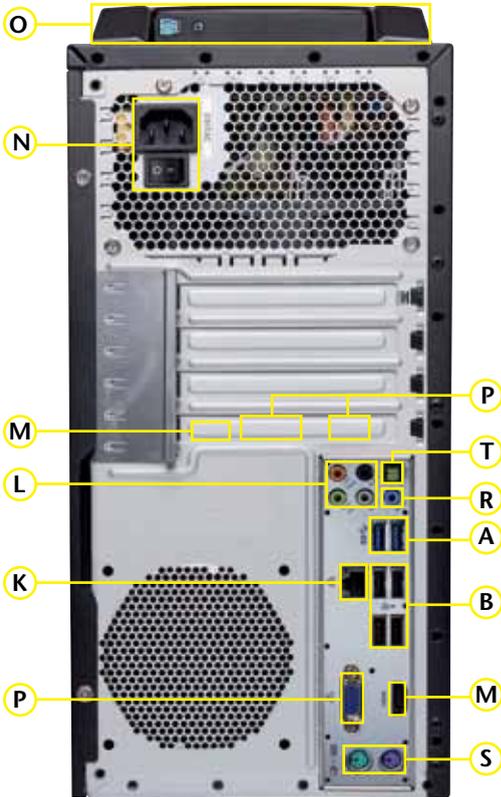

Front

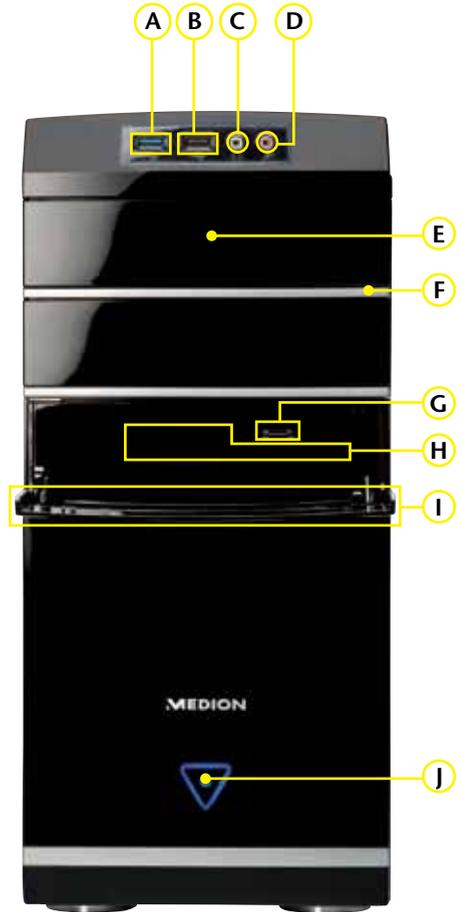

The shown connectors are for reference only.
Slight variations may occur.

Attention: Depending on the features of your PC model,
some connections may vary.

POS	Description	see page
A	USB 3.0 ports	17, 39
B	USB ports (e.g. scanner, digital camera)	17, 39
C	Headphone socket	19, 37
D	Microphone input	19, 37
E	Optical drive (CD/DVD/CDRW/DVDRW)	32
F	Eject button of optical drive	32
G	eSATA Port	18
H	Card reader	35
I	Front bezel	16
J	On/off switch (switches the PC on/off) / Power LED	22
K	Gigabit network (RJ-45, 10/100/1000 Mbit/s)	18, 40
L	Speakers (cen bass) Speakers (front out) Speakers (surr-1) Speakers (surr-2)	20, 37
M	HDMI connector	20, 36
N	Power supply (main connector & main power switch)	21
O	Docking station for external harddisk Medion HDDrive2Go super speed	31
P	Monitor connector VGA	16, 36
R	Audio input (line in, recording)	21, 37
S	PS/2 ports for mouse & keyboard	21
T	Digital Audio Out SPDIF (opt.)	20, 37

Table of Contents

About these Instructions.....	7
Symbols and Key Words Used in these Instructions	7
Proper Use.....	8
Information about Conformity	8
Safety Instructions.....	9
Dangers for children and people with reduced ability to operate machinery.....	9
Operational Safety	9
Never carry out repairs yourself.....	10
Data Security.....	10
Included with your PC.....	11
Setting Up of the PC.....	12
Operational Environment.....	12
Ambient Temperature.....	12
Ergonomics.....	13
Connecting	15
Cabling	15
Front Connectivity	16
Connecting the Monitor.....	16
Connecting USB Devices	17
Connecting eSATA Devices	18
Remove eSATA Devices.....	18
LAN Connection.....	18
Connecting Headphones	19
Connecting a Microphone	19
Connecting Speakers/Audio Output	20
PCs with Surround Sound.....	20
Connecting HDMI Devices	20
Connecting a Sound Source/Audio Input.....	21
Connecting PS/2 Devices	21
Connecting the Power Supply	21
Getting Started.....	22
Step 1: Power On.....	22
Switch	22
On/off Switch	22
Step 2: Initialisation of Your PC	23
Step 3: Finalising.....	23
Short Description of the Windows® Desktop.....	24
The Mouse	27

The Keyboard	28
The Alt and Ctrl Keys	28
The Hard Drive	29
Important Directories	30
Connecting an External Hard Drive	31
The Optical Drive	32
Loading a Disc.....	32
How to Remove a Disc	33
Playing Back and Retrieving Data from Discs	33
Regional Playback Information for DVD.....	33
Subjects Concerning the CD/DVD-Rewriter.....	34
The Card Reader.....	35
The Graphics Card.....	36
Appearance and Personalisation.....	36
The Sound System.....	37
USB Port	39
The Network	40
What is a Network?	40
Wireless LAN	41
Safety Note	41
Conditions	41
Troubleshooting within the Network	42
Software.....	43
Getting to Know Windows® 7	43
Windows® 7 - News	43
Windows® 7 - Help and Support.....	45
Windows® 7 - Getting Started	46
Windows® 7 - User Account Control	47
Windows® 7 - Control Panel.....	48
Windows Media Center.....	49
Installation of Software	52
How to Install your Software.....	52
Software Uninstallation.....	53
Windows Activation	54
Product Activation on Your PC	54
BIOS Setup.....	55
Execution of the BIOS Setup	55
Kaspersky Internet Security	56
Data and System Security	58
Data Security.....	58
Maintenance Programs	58

- System Restore59
 - Correction.....59
 - Windows® Update.....60
 - Windows Update Information for Data Security61
- System Restore62
 - Limits of the Recovery62
 - Carrying out a Restore.....62
- FAQ – Frequently Asked Questions.....63
- Customer Service64
 - Troubleshooting64
 - Localise the Cause.....64
 - Errors and Possible Causes65
 - Additional Support.....66
 - Driver Support66
 - Transporting the PC.....67
 - Cleaning and Care67
- Repairs68
 - Notes for Service Engineers68
 - Notes on Laser Radiation.....69
- Recycling and Disposal.....69
 - FCC Compliance Statement70
- Index71

Purchase Details

Enter your purchase details below for quick reference.

Serial Numbers

(i.e. Microsoft®)

Place and date of Purchase

You will find the PC serial number on the rear of the PC. Also copy this number into your guarantee documents, if necessary.

Audience

These instructions are intended for both the novice and advanced user. Regardless of the possible professional utilisation, this PC is designed for day-to-day household use. The functions and applications for use with this PC have been designed with the entire family in mind.

Quality

Medion has selected the components in this computer for their high level of functionality, ease of use, safety and reliability.

Through balanced hardware and software design we are able to provide you with an innovative personal computer useful for applications relating to both work and leisure.

We are pleased to welcome you as our newest customer. **Thank you for choosing our products.**

Making Copies of this Manual

This manual contains information protected by law. All rights reserved. Duplicating this information in mechanical, electronic, or any other form, without the written approval by the manufacturer, is prohibited by copyright law.

Copyright © 2012

All rights reserved.

This manual is protected by Copyright.

Trademarks:

MS-DOS® and **Windows®** are registered trademarks of **Microsoft®**.

Other trademarks are the property of their respective owners.

MEDION® makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

MEDION® shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

MEDION® assumes no responsibility for the use or reliability of its software on equipment that is not furnished by **MEDION®**.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of **MEDION®**.

The information in this document is subject to change without notice.

About these Instructions



Read these operating instructions carefully before using the appliance for the first time. Note the warnings on the unit and in the operating instructions.

Always keep the operating instructions close to hand. If you sell the equipment or give it away, make sure you also hand over these instructions and the warranty card.

Symbols and Key Words Used in these Instructions

	<p>DANGER! <i>Warning: immediate mortal danger!</i></p> <p>WARNING! <i>Warning: possible mortal danger and/or serious irreversible injuries!</i></p>
	<p>CAUTION! <i>Please note the following guidelines to avoid injuries and property damage!</i></p> <p>CAUTION! <i>Please note the following guidelines to avoid property damage!</i></p>
	<p>NOTICE! <i>Additional information on using the device.</i></p>
	<p>NOTICE! Observe the notes in the instruction manual!</p>
	<p>WARNING! <i>Warning: risk of electric shock!</i></p>
•	Bulleted item/information on operating steps and results
▶	Tasks to be performed

Proper Use

This device is intended for the usage, editing and management of electronic documents and multimedia content.

The device is intended for private use only and not for industrial/commercial use.

Please note that we shall not be liable in case of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Follow all the instructions in these directions for use, especially the safety information. Any other use is deemed improper and can cause personal injury or damage to the product.
- Do not use the device in extreme ambient temperatures and conditions.

Information about Conformity

The following remote equipment has been supplied with this device:

- Wireless LAN

When used in France, the built-in wireless LAN solution may only be used in buildings due to the capacity of the device. Currently the other EU-countries and Australia do not have any restrictions.

The company declares herewith that these devices are in agreement with the fundamental requirements and the other relevant terms of the 1999/5/EG Guideline.

This device fulfils the basic requirements and the relevant regulation of the Eco design Guideline 2009/125/EG.

Complete declarations of conformity are available under www.medion.com/conformity.



Safety Instructions

Dangers for children and people with reduced ability to operate machinery

Do not allow small children to play unattended with electrical equipment. Children are incapable of judging potential risks properly.

Keep the appliance and its accessories out of reach of children.



DANGER!

Keep plastic packaging out of reach of children. There is a risk of suffocation.

Operational Safety

Please read this chapter carefully and observe all listed notes. This ensures a reliable operation and long life expectancy of your PC:

- Do not open the PC casing or use the PC with the casing removed. When the casing is open there is a danger of electric shock.
- Optical drives are Laser Class 1 devices. These lasers must remain in their sealed PC casing. Do not remove the drive covers, as exposure to the lasers may prove harmful.
- Do not insert objects through the slots and openings of the PC. This may lead to electric shock, electrical short-circuit or fire that will damage your PC.
- Do not cover the slots and openings in the PC casing. These openings are for ventilation purposes. Covering these vents may lead to overheating. Please keep free a minimum distance of 20 cm on all sides when setting up the PC.

Switch off your PC immediately or do not switch it on at all and contact customer service...

- ... if the power cord or the connectors attached to it are burnt or damaged. Replace the defective power cord with an original power cord. Under no circumstances may a defective power cord be repaired.
- ... if the housing of the PC is damaged or fluids have leaked into it. Have the PC checked by customer service first, because the PC may not be safely operated otherwise and there may be a life-threatening risk of electrocution!

Never carry out repairs yourself



CAUTION!

Never try to open or repair the appliance yourself. There is a risk of electric shock!

- If there is a fault, contact the MEDION Help Desk or other suitable specialist workshop.

Data Security



ATTENTION!

Every time you update your data make back-up copies on an external storage medium. The supplier does not assume liability for data loss or damage to data storage units, and no claims will be accepted for damages resulting from the loss of data or consequential losses.

Included with your PC

Please check that the contents listed below are supplied with your package. You MUST provide your PC's serial number when contacting a customer service representative.

Your PC bundle should include the following components.

- PC and power cord
- OEM Version of Operating System
- Documentation



WARNING!

Keep the packing materials, such as plastic sheeting away from children. The danger of suffocation could arise in the case of misuse.



NOTICE!

Keep the original packing in case the device ever requires shipment.

Setting Up of the PC

Remember that choosing the proper location for your PC is just as important as connecting it correctly.

Operational Environment

- Keep your PC and all units connected to it away from moisture, dust, heat and direct sunlight. Failure to observe these instructions can lead to malfunctions or damage to the PC.
- To prevent damage to your PC from a fall, place and operate the PC and all connected units on a stable, balanced and vibration-free surface.

Ambient Temperature

- The PC can be operated at an ambient temperature of between 10° and 35°C (+41° and +95°F) and at a relative humidity of between 30% and 70% (without condensation).
- When powered off, the PC can be stored at temperatures between -20° and 50°C (-40° and +158°F).
- Unplug the power during thunderstorms and make especially sure to remove the antenna cables, if present. We recommend the use of a surge protector for additional safety in order to protect your PC from being damaged by power surges or lightning strikes through the power network.
- Delay operating a PC after transport until the device has adjusted to the ambient temperature. In situations of large temperature or humidity differences condensation may build up moisture inside the PC, which might cause an electrical short circuit.

Ergonomics



NOTICE!

Ensure that the monitor is set up in such a way that reflections, glare and light/darkness contrast are avoided.



You should not position the monitor in close proximity to a window as this is usually the brightest area of the room and may cause visual impairments during daylight hours.

Always position the monitor in a line of sight that runs parallel to the window. You should also apply a parallel line of sight with respect to artificial lighting. This means that in a room lit by artificial light essentially the same criteria and objectives apply. Should it not be possible to arrange the monitor as outlined above, the following measures might be helpful:

- Turn, lower or incline the monitor.
- Place horizontal or vertical shades on the windows.
- Work in Comfort



NOTICE!

Take regular breaks from your screen to prevent tenseness and exhaustion.

Sitting in one position for long periods can be uncomfortable. To minimise the potential for physical discomfort or injury, it's important that you maintain proper posture.

Overall:

Change your position frequently and take regular breaks to avoid fatigue.

Back:

While sitting at your work surface make sure your back is supported by the chair's backrest. This should be in an erect position or angled slightly backwards.

Legs:

Your thighs should be horizontal or angled slightly downward. Your lower legs should be at a right angle to your thighs. Your feet should rest flat on the floor. If necessary, use a footrest but double check that you have your seat height adjusted correctly before getting a footrest.

Arms:

Your arms should be relaxed and loose, elbows close to your sides with forearms and hands approximately parallel to the floor.


Wrists:

Your wrists should be as straight as possible while using the keyboard, mouse or trackball. They should not be bent sideways or more than 10 degrees up or down.

Head:

Your head should be upright or tilted slightly forward. Avoid working with your head or neck twisted.

- Hand rest:
5 - 10 cm
- Viewing distance:
50 - 70 cm
- Legroom (vertical):
minimum 65 cm
- Legroom (horizontal):
minimum 60 cm
- Top line of screen at eye level or slightly below.

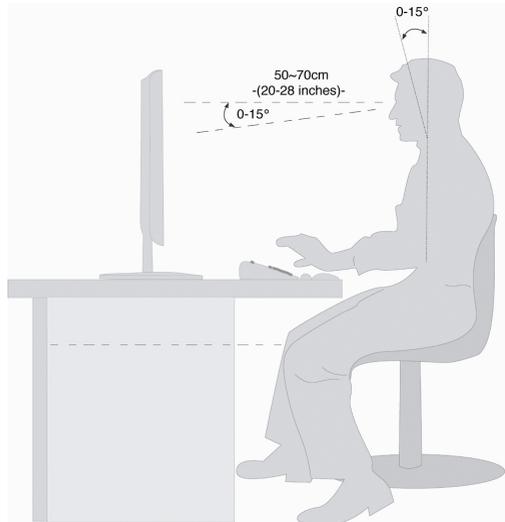

Connecting

For easy reference, please fold out the inner cover of this manual to see diagrams describing the location of the various connectors on your PC.



NOTICE!

The devices listed are not necessarily included with your PC. All the connections listed are optional and might not all be available on your PC.

Cabling

Please follow the instructions below in order to correctly connect your PC:

- Arrange cables in such a way that no one can tread on or trip over them.
- Do not place objects on the cables.
- To avoid damage to your PC, connect your peripherals (e.g., keyboard, mouse and monitor) whilst your PC is powered off. Some devices can be connected whilst your PC is in use. These devices usually have a USB connector. Please follow the appropriate instructions for each device.
- Keep the PC at least one meter (approximately three feet) away from high frequency and magnetic interference sources (e.g., televisions, loudspeaker cabinets, mobile telephones, etc.) in order to avoid malfunctions and/or loss of data.
- Please note that only shielded cables shorter than 3 meters (9.84 ft) should be used for the external interfaces. Please only use double screened cables for printer cables.
- Do not replace the cables supplied with the machine by any others. Use only the cables supplied with the PC because they will have been tested extensively.
- Also only use the connection cable supplied with the devices for the connection of your peripheral devices.
- Make sure that all connection cables have been connected to the peripheral devices associated with them in order to avoid disruptive radiation. Remove unnecessary cables.
- In the first hours of operation, new devices may emit a typical, unavoidable but completely harmless smell, which will decline increasingly in the course of time. We recommend that you ventilate the room regularly, in order to counteract the formation of the smell.



NOTICE!

You only need to connect those components to your computer that you require. If you do not have the described device available (e. g. printer) you may carry out the connection later.

Front Connectivity

Diagram reference: I

Some connections are located behind the front flap. This offers you the great advantage of creating frequently used connections quickly and conveniently, without turning the PC round. The flap, when closed, also protects the connectors.

Connecting the Monitor

Diagram reference: P

Your PC is equipped with a **VGA** connector.



NOTICE!

Always only connect one data cable, in order to avoid problems with the signal allocation, if your monitor has several inputs (e.g. VGA and DVI).

Take care that the connector and the socket fit exactly to avoid damaging the contacts. Because of its asymmetric form the plug only fits into the socket in one position.

- ▶ Connect the data cable of the monitor to the socket on the graphics card (reference **P**). If necessary, remove the white guard-ring on the monitor plug
- ▶ Hand-tighten the screws on the monitor cable.

Connecting USB Devices

Diagram reference: A, B



CAUTION!

Connect your USB devices after initial set-up of your new PC. This will prevent unnecessary confusion during installation. These devices can generally be connected during operation. Read the manual for your peripheral device first.

- The voltage outputs of your PC for USB are protected by a fuse. This ensures that a malfunction of the PC will not damage the peripheral devices connected to the respective jacks.

You have a choice of several connection sockets. It does not matter which one you use.



NOTICE!

Take care that the connector and the socket fit exactly to avoid damaging the contacts. Because of its asymmetric form the plug only fits into the socket in one position.

- ▶ If you wish to use a printer, scanner or other device with a USB port, connect the cable to the USB socket on your PC.
-



NOTICE!

Always connect your device to the same port otherwise your operating system will give a new ID and will ask for driver installation.

Connecting eSATA Devices

Diagram reference: G

eSATA stands for "external Serial ATA" and is used for connecting external hard drives. Unlike common USB standards, the transmission speed of an eSATA connection is higher than that of external USB hard drives.



NOTICE!

Take care that the connector and the socket fit exactly to avoid damaging the contacts. Because of its asymmetric form the plug only fits into the socket in one position.

- ▶ Connect the cable to the eSATA socket in the front of your PC.

Remove eSATA Devices

- ▶ Before removing an eSATA hard drive from your PC, click on the icon "Safely remove hardware" in the task bar and then on the hard drive to be removed.

LAN Connection

Diagram reference: K

Your PC is equipped with a network connection, in order to prepare it for network operation.

The network cable usually has two **RJ45** plugs so that it is unimportant which plug is connected to which jack.

- ▶ Connect the one plug of the cable to the PC jack.
- ▶ Connect the other plug to the other PC or hub/switch.

For further information refer to chapter "The Network" starting at page 40.

Connecting Headphones

Diagram reference: C

Here you connect **headphones/earphones**.

- ▶ Connect the cable with the **3.5 mm stereo** jack plug in the green socket at the front of your PC (diagram reference C).



WARNING!

The use of headphones/earphones with a high volume can lead to lasting damage to your hearing. Set the volume to the lowest level before reproducing any sound. Start the sound reproduction and increase the volume to the level that is comfortable for you. Changing the basic settings of the equalizer can also cause damage to the hearing of the listener.

It can cause damage to the hearing ability of the listener if a device is operated through earphones with an increased volume for a long period.

Connecting a Microphone

Diagram reference: D

- ▶ You can use the pink socket to connect a microphone with a **3.5 mm mono** jack plug.
- ▶ Position the microphone in such a way that it does not point directly at the speakers. If you hear feedback, characterised by loud whistling noises, reposition the microphone until the sound stops.

Connecting Speakers/Audio Output

Diagram reference: L

Here you can connect your active speakers for replaying or audio connection cables for recording. Please refer to the user's guide of your stereo installation for information about which connector you should use (usually Line In or Aux).

- ▶ Connect the cable with the **3.5 mm stereo** jack plug into the green socket on the rear of your PC.

PCs with Surround Sound

Diagram reference: L

Connect your surround equipment as follows:

- ▶ Connect the **Front** speaker to the green socket marked **front out**.
- ▶ Attach the rear loudspeakers to the connector **surr-1**.
- ▶ Your centre speaker or subwoofer can be connected to the socket **cen bass**.
- ▶ Connect to the optional **surr-2**.

An **digital audio output (SPDIF)** can be connected to an optical cable.

Diagram reference: T

- ▶ Connect the optical cable to the optical plug.
- ▶ Connect the other end of the cable to an audio device with a corresponding digital input.

Connecting HDMI Devices

Diagram reference: M

HDMI is the abbreviation for "High Definition Multimedia Interface" which is a digital interface to transfer image and sound signals.

- ▶ To this port you can connect a TV device, a monitor or a projector, if these devices also have a corresponding connector.

Connecting a Sound Source/Audio Input

Diagram reference: R

This port is used to accommodate a connecting cable for external analogue audio sources (i.e. stereo system, keyboard/synthesizer).

- ▶ Connect the cable with the 3.5 mm stereo jack plug to the light-blue coloured socket.

Connecting PS/2 Devices

Diagram reference: S

You can omit this step if you want to connect a USB mouse or keyboard.

- ▶ Connect the mouse cable to the right, green PS/2 port.
- ▶ Connect the keyboard to the left, blue PS/2 port.

Connecting the Power Supply

Diagram reference: N

Finally, connect the power supply to your PC and monitor.

- ▶ Plug the main power cord into the power socket and connect it with the main cord connection (N) of your PC.

Observe the following safety precautions:



WARNING!

Even with the power switch switched off some parts of the device receive current. You must unplug the power plug from the socket, if you want to interrupt the power supply to your PC or cut off your device from current entirely.

- The power socket must be in the vicinity of the PC and within reach of the power cords. Do not stretch the power cords tightly to reach a power socket.
- Only operate the PC on grounded plugs of the domestic power network.
- Use only the supplied power cord.
- To provide additional protection against electric shock, power surges, lightning strikes, or other electrical damage to your PC, we recommend the use of a surge protector.
- The power supply unit has an On/Off switch that can be used to power off the PC. When the switch is Off (0) no power is being consumed.

Do not start your PC yet!

First, read the following section to find out what you need to know in order to get started.

Getting Started

The software on this PC comes **fully pre-installed**. You do not have to load any of the CD's/DVD's supplied.

With many programs (e.g., telephone-CD's or encyclopaedias), however, it is necessary to insert the corresponding CD/DVD in order to call up the data which is stored on it. The software will ask you to do this if necessary. Once you have made all the connections and secured the necessary connectors you can turn on the monitor, the other peripherals and finally the PC itself.

Step 1: Power On

- ▶ Power on the monitor and your peripherals.

Switch

Diagram reference: N



- ▶ Provide power to your PC by pressing the switch to position [I].(You will stop the flow of current to the PC by pressing the switch to position [O])

On/off Switch

Diagram reference: J

- ▶ Press the On/off switch briefly to start loading the operating system.

You can program the function of the main switch in the power management of Windows® (please refer to on-line help). The PC will always be switched off, if the main switch is pressed for more than 4 seconds.

CAUTION!



If the operating system is not shut down properly (through  ⇨ ) , then there is a risk of data loss.

Step 2: Initialisation of Your PC

The PC starts and now goes through a number of phases:



NOTICE!

Ensure that there is no bootable CD (e.g. the Recovery-CD) in the CD-ROM drive. Such discs will prevent the operating system from loading directly off the hard drive.

The operating system is loaded from the hard disc. During the initial set-up, the loading process takes slightly longer than normal to register the operating system and the individual components completely. Your operating system is finished loading when a welcome screen is shown on your display.

Follow the instructions on the screen. Dialogue boxes will explain any steps that need to be taken. The greeting procedure will guide you through the following screens and dialogues.

Should you have any questions just click on  .

License agreement

Please read through the license agreement carefully. It contains important legal information on the use of your software. In order to see the full text, use the mouse and the scroll bar to move downwards until you have reached the end of the document. You accept the agreement by clicking on the **I accept the agreement** option field. Only by doing so will you be entitled to use the product under lawful terms and conditions.

Step 3: Finalising

After the login procedure the Windows® desktop appears on your screen.

This can be adjusted so that the screen of your computer looks different. The basic operation, however, is ensured.

Short Description of the Windows® Desktop

❶ Start Button

Clicking the Start button brings up a menu where you can access help, software programs, files, and settings

❷ All Programs

All of the software programs installed on your PC are ordinarily listed here. Click All Programs to reveal an extensive menu.

❸ Taskbar

You can start programs and switch between already active programs using the taskbar beneath the screen. You can place every program in the taskbar under Windows® 7, so that you can always open it with a single click. Furthermore, you can rearrange the symbols on the taskbar by clicking on them and dragging them to the desired position. Move the cursor over the symbols, and the system will display a miniature of every file or window open in the program. When you move your cursor over the miniature, the system will display a full-screen preview of the particular window. If you move the cursor away from the miniature, the full-screen preview will close.

❹ Windows Search

Windows Search helps you find almost all data located on the PC, quickly and easily. With Windows® 7, you get search results with greater relevance, and they are easier to understand.

❺ Program Bar

The most commonly used software programs are listed here. The operating system recognises all this automatically. Clicking on an entry with the right mouse key enables you to decide which entry on the list to keep or to remove. The program linked to the input is not erased.

❻ Turn Off

To turn off the PC, click on the **Shut down** button with the left mouse key.

❼ Desktop

Click on this Button if you would like to minimise all the windows open onto the taskbar, in order to obtain a clear view of the Desktop.

❽ Desktop Icons

Desktop icons link to their respective programs. To start a program, double-click its desktop icon.

The **desktop** encompasses nearly the entire screen and acts as the shelf space for such entries or for other links, to which you would like rapid access.

❾ Logged in User


This tells you which user is logged in to your PC.

⑩ Control Panel

You can use the icons in Control Panel to change the appearance and functionality of Windows® 7. These icons represent options for configuring your PC. You should, however, consult "**Help and Support**" on the potential effects of certain changes.


⑪ System Tray

When certain events occur, for example, upon receipt of an e-mail message or upon opening the task manager, it may happen that too many notification symbols are displayed in this field. Windows® displays a notification symbol when an event occurs. After a short time, Windows® places the symbol in the background, in order to maintain the straightforwardness of the field. You can access the symbols placed in the background by clicking on a button in the system tray.

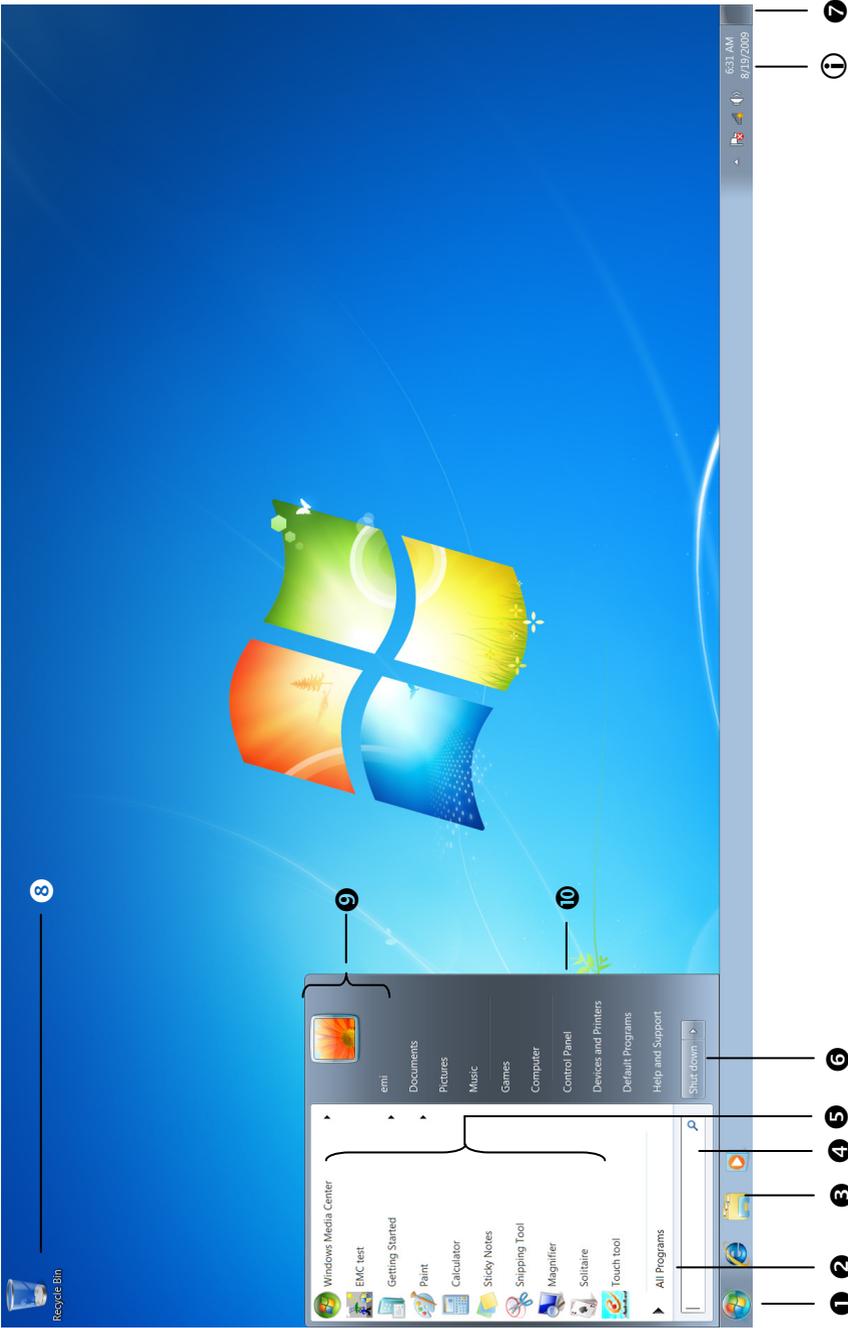

The Mouse

The mouse has beside the two keys a wheel that can be used to scroll through a document or internet pages.

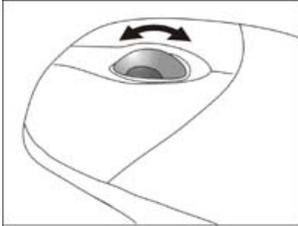

NOTICE!

The scroll wheel can be used as a button. The functionality depends on the application. In Word for example you can push the wheel to move up and down as a scroll function.

If the mouse cursor moves jerkily on the screen, try a different surface (mouse pad). Glass and metallic surfaces might cause problems.

The Keyboard

This section contains useful information on using the keyboard.

The Alt and Ctrl Keys

The left **Alt** key performs certain functions in conjunction with other keys. The application program determines these functions. In order to enter a combination of keys that include the **Alt** key, hold the **Alt** key down while pressing the other key. The right **Alt** key operates in a similar way but selects certain special characters. The **Ctrl** key, like the **Alt** key, carries out program functions.

Useful key combinations (software-dependent):

Key Combination	Function and Description
Alt + F4	As a rule ends the program selected or closes the window opened.
Alt + Print screen	Copies the image of the window currently active to the clipboard.
Shift + '	Generates the @ character required for e-mails (pronounced: at).
Ctrl + Alt + Del	Windows security is launched.

(Country-specific variances are possible.)

The Hard Drive

The hard drive is the main storage medium combining large storage capacity and rapid data access.

The hard drive contains the operating system of the computer, other application programs and backup files. These programs and files are pre-installed on your PC, so you may note that some of the space on your hard drive is already taken.

The Windows operating system cannot use the full capacity of the hard drive, which means that there will be a difference between the capacity that the BIOS displays and what the operating system displays. The operating system of the PC, further application programs and backup files are located on the hard drive and reduce its total capacity.



ATTENTION!

Never switch off the computer while the PC is accessing the hard drive. This may result in loss of data.

In your first partition (C:\) you will find the operating system, application programs and the users' documents.

The second partition (D:\) serves for data security and contains additional drivers (D:\Driver) and tools (D:\Tools) for your PC.



ATTENTION!

You will also find in two otherwise non-overwriteable partitions the system restoration start files (\Rightarrow p. 62), as well as installation files for Windows® 7. These partitions are not visible and should not be erased.

Important Directories

In the following we have listed the most important directories and described their content.



ATTENTION!

Do not delete or modify these directories or their contents since data could be lost or the functionality of the system could be at risk.

- C:** The master directory of drive C: includes important files required to start Windows®. In the factory setting these files are hidden for safety reasons.
- C:\Programs** As the name suggests, in this directory programs install the files belonging to the application.
- C:\Windows** The main directory of Windows®. This is where the files of the operating system are saved.
- D:\Driver** This folder includes the drivers required by your computer (pre-installed).
- D:\Tools** Here you find additional programs and other documentation for your PC.

Connecting an External Hard Drive

Diagram reference: **O**

Your PC has a hard drive bay, which will enable you to connect the external **MEDION HDDrive 2go super speed** hard drive simply and without complications via the USB 3.0 connection.

As in the case of a USB memory stick, connection takes place with a restarted operating system. The hard drive will be recognised as a replacement storage medium and will be allocated a drive letter automatically.



NOTICE!

Please take note of the fact that only the MEDION Hard Drive specified above can be connected to the hard drive bay. This slot is only compatible with the MEDION HDDrive 2 Go super speed hard drive!

All other HDDrive 2Go hard drives of earlier generations cannot be used!

MEDION HDDrive 2Go super speed hard drives are not included.

As soon as you properly insert the hard drive into the hard drive bay, this is recognised as the removable data carrier of your PC.



CAUTION!

The plugs are provided with dust protection caps to protect the connections. They must be removed before use. The caps must be replaced under all circumstances, if the connections are not used.

The **MEDION Hard Drive HDDrive 2Go super speed** is available in the following sizes:

- **MEDION Hard Drive HDDrive 2Go super speed 6,35 cm / 2,5" USB 3.0** and
- **MEDION Hard Drive HDDrive 2Go super speed 8,89 cm / 3,5" USB 3.0.**

The Optical Drive

Diagram reference: E, F

Loading a Disc



NOTICE!

Do not place protective foils or other stickers on your CD's. To avoid damage to your drive, do not use deformed or damaged CD's.



CAUTION!

Do not use scratched or dirty discs, discs with pieces broken off or discs of poor quality. Because of the high speeds in the drive the discs might break and damage your data as well as your drive. Examine the discs before you enter them. If damage or dirt is visible, you should not use them. Damage caused by faulty media is excluded from warranty and any repair will be charged.

If the disc is not correctly placed into the slot then it could be damaged when the drive tray closes.

- ▶ Push the eject button (Diagram reference, F) on the right of the optical drive to open the tray.
- ▶ Place the disc on the tray so that it lays flat with the label facing upward.
- ▶ Push the eject button again to close the tray.
- ▶ Push the tray back into the optical drive carefully.
The 'E' drive letter will have been allocated to your optical drive in the delivery status. You will have easy access to your files on your discs with Windows Explorer (**Computer**). Start the **Computer Help Program** by means of the Desktop link  or by pressing the Windows key  and the 'E' key at the same time. Open Windows Explorer by means of **Start** ⇒ **All Programs** ⇒ **Accessories**. The pre-installed media reproduction will be used automatically during access to DVD movies (or audio and movie files on normal data CDs).

How to Remove a Disc

- ▶ To remove a disc push the eject button (Diagram reference F) again to open the tray.
- ▶ Remove the disc and store it at a safe place.
- ▶ Shut the tray.



CAUTION!

While the PC is accessing the optical drive the media activity is lit. Do not try to remove the disc from the drive while this LED is lit.

Playing Back and Retrieving Data from Discs

Your PC is able to playback and to retrieve Audio CDs, DVD Movies and Data discs.

After loading the disc your operating system will open a selection window with different options for playback.

If your operating system doesn't open the selection window you still have the possibility of access to the optical drive via the **Windows Explorer** or the **Computer** .

Regional Playback Information for DVD

The playback of DVD movies includes the decoding of MPEG2 videos, digital AC3 audio data and the deciphering of CSS protected contents.

CSS (sometimes called copy guard) is the name of a data protection program incorporated by the movie industry as an action against illegal copies.

Among the numerous regulations for CSS licensees the most important ones are the country specific playback restrictions.

In order to facilitate the geographically restricted release of movies, DVD titles are released for certain regions.

Copyright laws require the restriction of each DVD movie to a certain region (usually the region, in which it is sold).

DVD movie versions can be published in several regions but the CSS regulations require that each CSS decipherable system may only be used in one region.



NOTICE!

The decoding software included with your PC may be changed for regional DVD decoding up to five times, after which the drive will only play DVD movies for the region setting last entered. Changing the region code after that will require factory resetting which is not covered by warranty. If resetting is desired, shipping and resetting costs will be billed to the user.

Subjects Concerning the CD/DVD-Rewriter


Normal Discs are pressed from a digital, glass master and then sealed. In the case of blank disc, the information is burnt onto the disc with the laser of the Rewriter. Therefore these discs are more sensitive than normal CDs.

Please avoid the following when using recordable/rewriteable discs - especially blanks - that have never before been used:

- radiation by direct sunlight (UVA/UVB)
- scratches and damage to the disc surface
- extreme temperatures

The Card Reader

Diagram reference: H

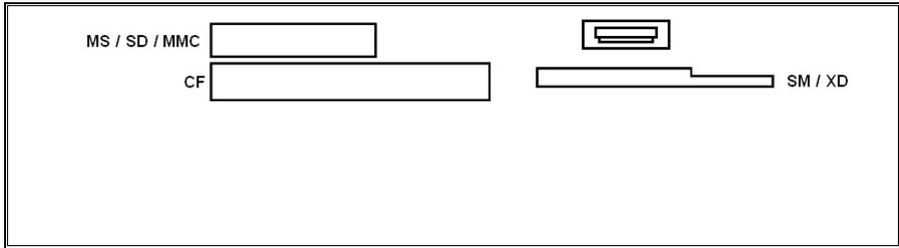

If your PC is equipped with a card reader, you can handle different memory card types. The following table refers to the use of the card reader:

Slot	Card type	Contacts
MS SD MMC	Memory Stick Memory Stick Pro SD (Secure Digital) MMC (MultiMediaCard)	pointing downwards
CF	CF (Compact Flash) IBM® Microdrive	point to front
SM/XD	SmartMedia XD	point to bottom pointing upwards

If a card is inserted, a free drive will be assigned* by Windows®.

* Only if this concerns removable media.


The Graphics Card

Diagram reference: M, P

Appearance and Personalisation

This program offers you the possibility of adjusting the presentation on your display. This includes the background image, the screensaver, Active Desktop (web) and additional settings of your display and your graphics card, for example. The program can be started in the following way:

- Right mouse click on the Windows interface (Desktop) and left mouse click on **Personalization**
- or**
- Via **Start** ⇨ **Control Panel** ⇨ **Appearance and Personalization** with a double-click with the left mouse button.

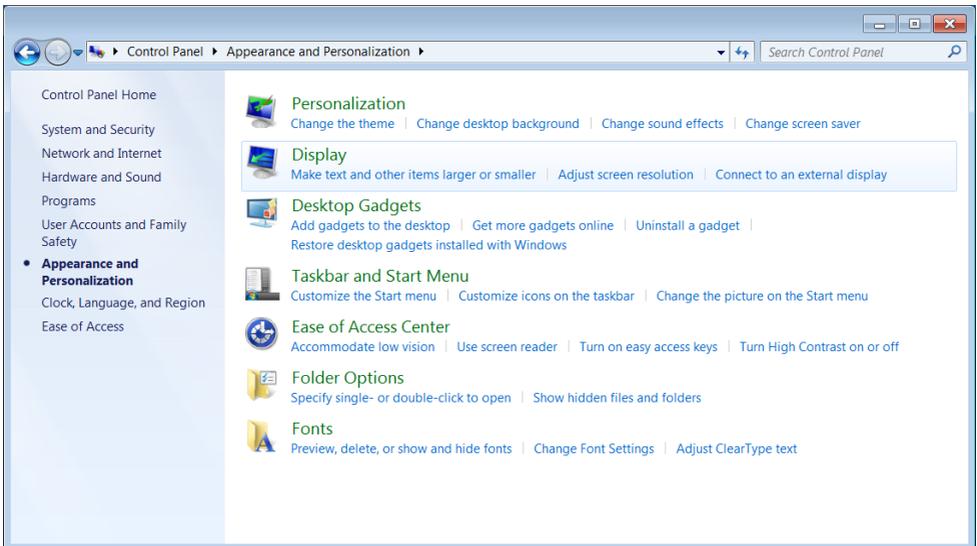

The Sound System

Diagram reference: C, D, L, R, T

 


NOTICE!


The speaker outputs L and T are designed for active speaker systems. Passive speakers cannot be used or if they are the quality will be significantly reduced.

By using the external connections you have the possibility to connect your PC with a surround sound system.

If you wish to alter the base volume, click on the loudspeaker symbol in the task bar.



Click on **Mixer**, in order to open the volume mixer.

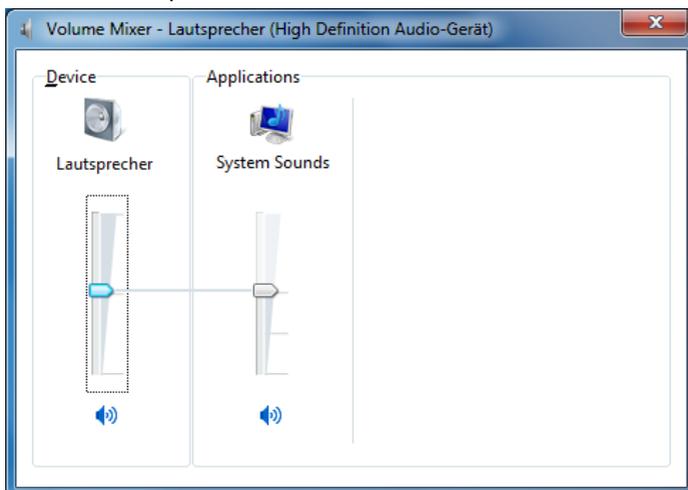

**NOTICE!**

Only connect the headphones/earphones to the front connector of your PC (diagram reference: C).

**WARNING!**

The use of headphones/earphones with a high volume can lead to lasting damage to your hearing. Set the volume to the lowest level before reproducing any sound. Start the sound reproduction and increase the volume to the level that is comfortable for you. Changing the basic settings of the equalizer can also cause damage to the hearing of the listener.

Wenn ein Gerät längere Zeit mit erhöhter Lautstärke über einen Kopfhörer/Ohrhörer betrieben wird, kann das Schäden am Hörvermögen des Zuhörers verursachen. It can cause damage to the hearing ability of the listener if a device is operated through earphones with an increased volume for a long period

USB Port

Diagram reference: A, B



NOTICE!

Devices connected directly to the USB port should not draw more than 500 mA. The voltage output is protected by a fuse (Limited Power Source according to EN 60950). Should the devices need more power than this, it will be necessary to provide a hub (distributor / booster).

On the USB it is possible to connect up to 127 devices which correspond to the USB standard (1.1 and 2.0 supported).

USB 3.0 connectors can also be used to connect USB 1.1 and USB 2.0 devices (USB 3.0 connectors are backwards compatible with USB 2.0 and USB 1.1).



NOTICE!

If possible, always connect your USB devices to the same port where it has been installed. Otherwise you will get a new ID and your operating system will ask for a new installation of the driver.

The Network

Diagram reference: K

Your PC is provided with a Fast Ethernet-Network connector

You will find further information about networking in the **Help** section within the **Start** menu.

What is a Network?

A network means connecting your PC to another or several other PCs. Users can transfer information and data between computers and share resources such as printers, modems and hard drives.

Here are some practical examples:

- You can exchange Email and manage appointments in an office.
- Users share a printer in a network and save their data on a central server.
- Two or more PCs can be connected to play network games or share data.

Wireless LAN

Your PC is equipped with WLAN. The components (Module, antenna) are already integrated and activated in your computer. You can turn off the wireless LAN function with the help of the Windows® Device Manager.

This function allows you to create a wireless network link with a partner.

Safety Note



CAUTION!

Don't use this feature in environments where highly sensitive devices are placed such as in hospitals etc. To avoid any interference disable this option in your device manager.

Conditions

The partner used can be a wireless **access point**. An access point is a wireless transmitter that communicates with your PC and controls access to the network connection (e.g., a home network or a broadband connection such as DSL).

Wireless access points are often found in offices, airports, universities or Internet cafés. They offer access to enterprise services and networks or to the Internet.

Access authorizations are normally needed. A fee may be required to use a public access point. To set up a wireless network to share Internet access, files, and printers at home, you will need an access point, a router, and a broadband (DSL or cable) modem. Some access points can also serve as a router and/or a broadband modem. Check with your service provider to find the best solution for your needs.

A link to another computer with wireless LAN functionality can also be created **without an access point**. This will allow you to share files, but you will need an access point and a router to share an Internet connection. The wireless network link works according to standard **IEEE 802.11n**^{*} and is compatible to standard **IEEE 802.11 b/g**. Other standards (802.11a etc.) are not supported.

The transmission speed can vary according to distance and other factors.

Search for "wireless networking" in Windows Help and Support for more information.

^{*} In order to the full capacity of the IEEE 802.11n module in this notebook, a WLAN router which supports the 802.11n standard is required.

Troubleshooting within the Network

-  Why does the network environment not show the releases?
 -  The network environment is delayed in time. Check the release by searching for the respective computer name.
-  Why does an error message appear when I click on the network environment?
 -  The computer name must be unique on the network and may not be the same as the task group.
-  It appears that the network boards are unable to communicate. What might be the problem?
 -  Maybe one of the used network boards works with a different speed (e. g. 10 instead 100 Mbit) and your network computer is unable to recognise this. If necessary, set the network driver to the compatible speed.
 -  If two PCs should be linked you require a cross-link cable, otherwise use a patch cable.
 -  In addition, check the protocols and the configuration.
-  The data transmission is incorrect or very slow. What might be the problem?
 -  Maybe you have the wrong cable (UTP / CAT3 or lower) or the problem is the proximity of a power cord or another source of interference.

For further hints on troubleshooting refer to the Windows help under "**Network errors**".

Software

This section concerns itself with software. We make a distinction between the operating system, the software (application program), Windows activation, BIOS and the security package, which is delivered with the device.

Getting to Know Windows® 7

With Windows® 7, a new operating system is launched which succeeds Vista.

Windows® 7 contains a number of innovative functions and technologies, enabling your PC to work quickly and reliably, while being easy to use.

Windows® 7 – News

Improved Taskbar

The Taskbar at the bottom of the screen enables you to start programs and change between programs which are already running. Using Windows® 7, you can place any program in the Taskbar, so that it will always open with one single click. You can also arrange the symbols on the Taskbar simply by clicking on them and dragging them to the desired position. The symbols are also considerably bigger, so that they are easier to use. Moving the cursor over the symbols will display miniatures of each file or each window open in the program. Moving the cursor over the miniature displays a full-screen preview of the particular window. Moving the cursor away from the miniature closes the full-screen preview.

Jump Lists

Jump lists offer a practical possibility when opening files which you have recently worked on. To display recently used files, just right-click the application symbol on the Taskbar. Right-clicking on the Word symbol will display recently used Word documents. You can also easily place other files in the jump list if you would like to have them readily at hand, in which case they will always be displayed. This allows you to access documents which you use more frequently, with just a few mouse clicks.

The jump lists from a few programs, such as Windows® Media Player, can be filled in advance with frequently used commands. Thus, for example, the Windows® Media Player jump list might contain options to play all music or to re-open the latest play list.

The Internet Explorer jump list displays frequently and most recently visited websites. For certain programs, this enables rapid access commands which, in the past, could only be retrieved from the program itself, such as the command to create a new e-mail message.

Improved Desktop

Windows® 7 simplifies working with the windows on the Desktop. This provides you with more intuitive possibilities for opening and closing, as well as for changing the size and for rearranging.

Windows® 7 makes the performance of everyday tasks even simpler. For example, the Snaps function makes it easier than ever to compare two open windows. You do not need to adjust the size of the open window for comparison. Simply pull the window, using the mouse, to one of the edges at the side of the screen, and it will fill half the screen. Snap the window on both sides, and it is already easier than ever to compare two windows.

If you would like to display all Desktop mini-applications, simply move the mouse into the lower right hand corner of the Desktop. This makes all open windows transparent, so that the Desktop and all the mini-applications located on it will be instantly visible.

Click on the Titlebar of the window, "shake" it, and all open windows will be displayed as symbols on the Taskbar. "Shake" the window again, and the other windows will be displayed again.

Better Device Management

Windows® 7 enables you to close, manage and use all devices through the "**Devices and Printers**" central function.

All devices are displayed in a central position.

With the new Device Stage Technology, Windows® 7 even goes one step further in device management. Device Stage helps you use all compatible devices connected to your computer. Thanks to Device Stage, now you display the device status in one single window and carry out often-used commands. You will even find pictures of the devices here, easily enabling you to see which devices are connected. The manufacturer of the devices can even adapt Device Stage. If the manufacturer of your camera, for example, prepares an adapted version of Device Stage, you can see the number of photos on the camera and receive links to useful information when you link the camera to the PC.

Homegroup

With **homegroups**, a new function of Windows® 7, the linking of home computers is really simple. A home network group is created automatically, for example, when you link the first PC under Windows® 7 with the home network. The addition of additional PCs with Windows® 7 to the home network group is quickly accomplished. You can indicate exactly what should be released on each PC for all other PCs in the home network group. Finally, the shared use of files on the various home PCs, and on many other devices, is so simple that it is as if all files were located on one single hard drive. This allows you to store digital photos on the computer in your home office and then enjoy easy access to them from a laptop in any other room in the house. Similarly, the printer in home office is automatically released for all PCs in the house, as long as they are all in the home network group.

Beginners and persons changing from other Windows versions systems are advised to read this material carefully.


Windows® 7 – Help and Support

An answer to almost every question can be found in this program.

This help function fully covers the Windows operating system.


It is helpful for both beginners and professionals. You can print or bookmark the information, which is categorised into topics. You start like this:

- ▶ Click on **Start** .
- ▶ Now select **Help and Support** .

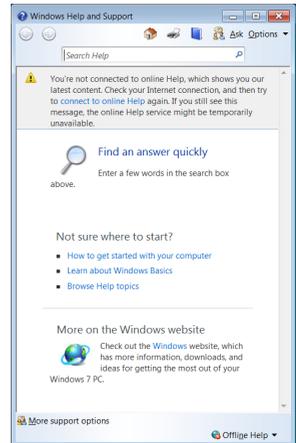

Windows® 7 – Getting Started

Learn everything you need to know about the features of the PC.

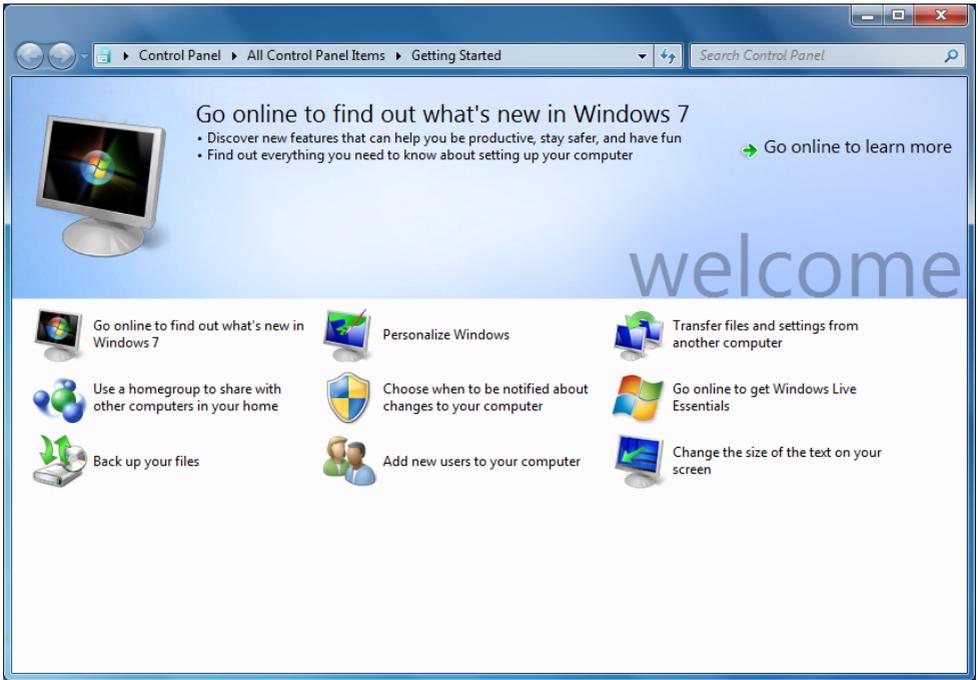

It is the aim of this feature to enable both beginners and experienced users to make additional setting for the optimal use of Windows®7 after first bringing the PC into operation.

Getting Started has been subdivided into many small groups of subjects, so that the user will have the possibility of adjusting the content optimally to his or her knowledge. There are some of the links in the following:

- Go online to find out what's new in Windows®7
- Personalise Windows
- Transfer files and settings from another computer
- Use a homegroup to share with other computers in your home
- Choose when to be notified about changes to your computer
- Back up your files
- Add new users to your computer
- Change the size of the text on your screen

Use **Getting Started** to understand your PC better and to be able to use it optimally. It will also serve you as an additional source of information for recognising and removing potential problems.

You will call up **Getting Started** as follows:

- ▶ Click on **Start** .

- ▶ Select  **Getting Started** in the Program List.

Windows® 7 – User Account Control


The User Account Control contributes to the prevention of unauthorised changes to the PC.

A window with the message "**Do you want to allow the following program to make changes to this computer?**" will appear as soon as you carry out an unauthorised change.

- ▶ Click on **Continue** in order to continue the procedure.
- ▶ Click on **Cancel** in order to end the procedure.

Windows® 7 – Control Panel

You can change Windows settings using the control panel. The settings control almost everything relating to Windows displays and functionalities, and they enable you to organise Windows according to your requirements.

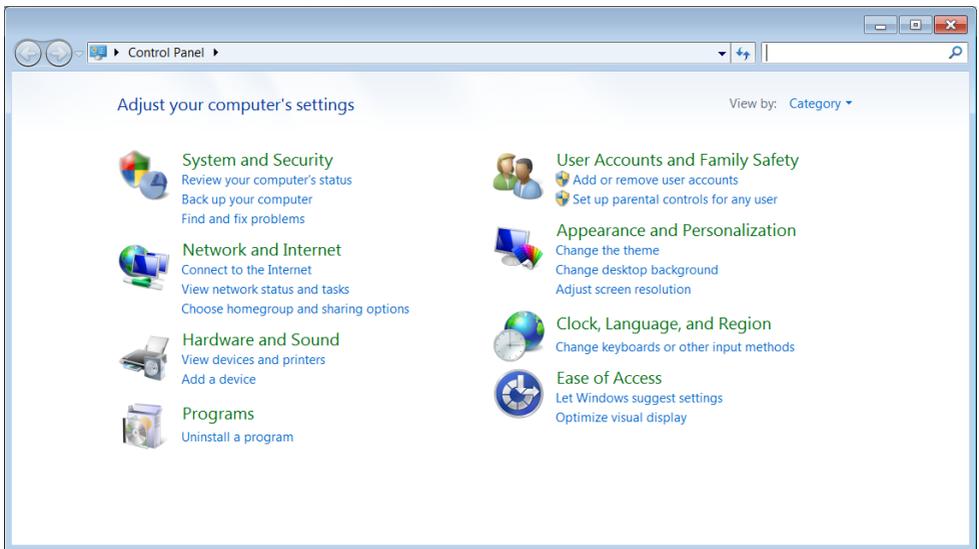

When you first open the **Control Panel**, a few of the most frequently used elements of the Control Panel are displayed by category.

For further information on any element in the Control Panel category view, hold the cursor over the symbol or category name and read the pop-up display text.

To open one of these elements, click on the associated symbol or category name.

For a few of these elements, a list, with executable tasks will open, with a selection of individual Control Panel elements.

Searching for the desired control elements may be effected in the following ways:

- ▶ Enter a word or expression in the search field.
- ▶ Click on Large Icons or Small Icons under Display Settings to display a list of all Control Panel elements.

Windows Media Center

The Windows Media Center is the platform for your individual home entertainment in Windows® 7. You will be able to record television, TV broadcasts, DVDs and music, look at photos and much more by a remote (not included) or by a click of the mouse, with the Windows Media Center.

You will start your individual entertainment as follows:

- ▶ Turn on your PC.
- ▶ Click on **Start** .
- ▶ Click on  **Windows Media Center**.



NOTICE!

The support of the functions depends on the hardware equipment of the PC. For example, the TV function requires a TV tuner (not included).

An overview of the Windows Media Center functions is below:

Main menu	Sub-menu
TV + Films	Recordings You will have the possibility of recording broadcasts if you connect a TV tuner. You can play back the broadcasts recorded, delete them or burn them on external media through this Menu point.
	Play back DVD You will play DVDs through this Menu point.
	Set up TV You will have the possibility of configuring the TV signal here, if you have an external TV tuner available.
Online Media	Programmes This library of programmes offers a listing of various online media. You will call up content through the Internet, from the online video library, through news portals to the music shop, by means of the online media. An existing Internet connection is the requirement for the use of this function.

Main menu	Sub-menu
Tasks	Settings Adapt the Windows Media Center to your requirements and needs here. For example, make the settings for the protection of children here.
	Stand by You will not only close the Windows Media Center but you will be able to put the whole operating system in stand-by through this sub-menu. Pay attention that all applications have been already closed before putting the system into stand-by.
	Burn CD/DVD Call up your burning software to start a burning process through this sub-menu
	Synchronising If you connect an external device, such as an MP3 player or a digital camera; you will be able to synchronise the respective data to an external device with the PC through this sub-menu.
	Extension set-up You will be able to set up a Windows Media Center extension by means of this sub-menu. You will be able to access the data on your PC by means of a cable or wireless network.
	'Only media' You will switch to the full image of the Media Center by means of this sub-menu.
Images + Videos	Library of images All the images stored in your PC will be located in the library of images. Start the playback in a slide show here.
	Play back everything Select ' Play back everything ', to start the playback of a slide show directly.
	Video library All the videos stored in your PC will be located in its video library.

Main menu	Sub-menu
Music	Music library All the music titles stored in your PC will be located in the music library. You will be able to start the selected playback of an album, an artist or a selected title here.
	Play back everything You will start the playback of all the files stored in your music library by means of this sub-menu.
	Radio You will have the possibility of listening to a radio broadcaster and to administrate it, if you have external radio tuner hardware available.
	Search You will be able to search for music titles, composers, artists, albums, etc. in a targeted way by means of this sub-menu. The search will start as soon as you have entered the first letters.

Installation of Software



NOTICE!

If your operating system is configured so that the installation procedure accepts only signed drivers (default) and software an information screen will appear.

The software included in delivery is already pre-installed in the factory.



CAUTION!

You may find that during the installation procedure important files may be changed or even cancelled. To avoid further problems in using older files after an installation, make sure you safeguard.

How to Install your Software

Please follow the instruction of the software vendor. We will describe a **typical** installation. Once you insert a CD, the installation menu is started automatically.




CAUTION!

If the automatic start does not work, it is likely that the so-called Autorun function has been deactivated. Read the respective chapter in Windows Help on how to activate this function.

An example for the manual installation **without** the autorun function:

- ▶ Click on **Start** .
- ▶ Click on ▶ **All Programs**.
- ▶ Open the  **Accessories** program point.
- ▶ Select the item  **Run**.
- ▶ Now enter the letter of the CD-ROM drive followed by a colon and the program name setup:

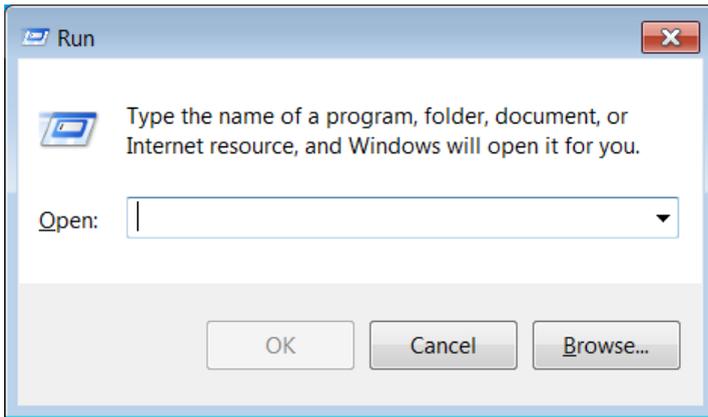

- ▶ Click on **OK**.
- ▶ Follow the instruction given by the program.

Software Uninstallation

In order to remove installed software from your PC, follow the next steps:

- ▶ Click on **Start** .
- ▶ Click on  **Control Panel**.
- ▶ Then select the  **Programs option**.
- ▶ Select the respective program, start the uninstallation and follow the instructions on the screen.

Windows Activation

Microsoft is committed to the protection of intellectual property rights and the reduction of software piracy. Therefore Windows® 7 contains software-based product activation technology. Your copy of Windows® 7 has already been **activated for your PC**.

Product activation is needed if some components of your PC have been replaced or you use a non-authorised BIOS. If necessary you can activate Windows® 7 as often as requested.

You will probably need to activate Windows® 7 by telephone even if Internet Activation is available. This is due to the pre-activated SLP version which runs with a special Product-ID. However, activation needs your unique Product ID which can be found on the **Certificate of Authenticity** sticker on your PC housing. When you call, please inform your agent that you are running an OEM-(SLP) version of the software.

Product Activation on Your PC

In few cases it may still be required to activate Windows® 7. If an activation via the **internet** is acknowledged with an error message you should perform the following steps.

- ▶ Please select the telephone activation and click until the related screen appears.
- ▶ Now click on change product key. A new window appears. Enter the product key. This is located on the Certificate of Authenticity (COA), on the computer's casing.
- ▶ Acknowledge your entry and follow the instructions on the screen. Notify your Microsoft consultant, if necessary, that you have an OEM license in connection with your PC.

BIOS Setup

In the BIOS set up (your PC's Basic Configuration) you have a number of parameter settings available for your PC. For example, you can change the operating mode of the interfaces, security features or power management.



CAUTION!

The PC is factory pre-set to guarantee optimum operation. Please only modify the parameters if this is absolutely essential and if you are familiar with the configuration possibilities.

Execution of the BIOS Setup

You can only execute the configuration program when starting the system. If the PC has already been started exit Windows® and reboot. Prior to rebooting the PC press the key **DEL** and keep it pressed until the message **Entering Setup** appears.

Kaspersky Internet Security

Kaspersky Internet Security is a comprehensive tool to protect your data. The use of it not only offers you full protection against viruses, but also against spam and attacks against your network. Further components of the software will protect your computer against threats and phishing attacks unknown up to now and allows the access to the Internet to be restricted sensibly. Full protection will cover all areas of data transfers and exchanges.

Kaspersky Internet Security is already installed, so that additional installation will not be necessary. If you nevertheless have to carry out an installation (e.g. after system restoration), you will find the software package on the application/support disc supplied with the machine.

Kaspersky Internet Security consists of the following security components:

- **File Anti-Virus**

File Anti-Virus will protect the file system of the computer against infection. The components will be started when the operating system is started. They will be permanently located in the working memory of the computer and will check all the files that are opened, saved or started on your computer and all the connected hard drives. Kaspersky Internet Security will intercept any attack on a file and will check the respective file for known viruses. A file will then only be released for use if it is virus-free or has been successfully disinfected by the program.

- **Mail Anti-Virus**

Mail Anti-Virus will check the incoming and outgoing emails on your computer. An email will only be delivered to the respective recipient if it does not contain any dangerous elements.

- **Web Filter / Child Protection**

The Web Filter will block visits to dangerous web pages and will create a safe working environment during Internet surfing in this way. Child protection allows access to Internet resources and programs to be restricted flexibly for different users of the computer depending on age.



NOTICE!

Kaspersky Internet Security will be activated automatically if the Internet connection is active. Manual activation will not be necessary. Kaspersky Internet Security will be deactivated automatically after a trial period. We recommend the acquisition of a licence in good time, to ensure the optimum protection of your computer, for this reason.

The Kaspersky Internet Security Package will be updated with the most up-to-date virus information for a trial period after the **free registration**.

Read the activation information about this on the internet at:

<https://www.Kaspersky.com>



NOTICE!

The operating system and anti-virus software are automatically updated when the first online connection is made. These processes usually take a few minutes, during which time the operating speed of the computer may be affected although this is only noticeable on initial start-upbar.

Data and System Security

The programs described below are part of your Windows operating system. You can find additional information on these programs in the Windows Help file.

Please also read the notes on page 9.

Data Security

Back up data regularly on external media such as a CD-R or CD-RW. Windows offers **Backup Status and Configuration**.

This program is found in **Accessories** ⇒ **System Tools** within the Start menu. You should make a backup disc with all your passwords and the operating system's original configuration.

Maintenance Programs

You can avoid some hardware and software errors with the help programs such as **Disk Defragmenter** and **Disk Cleanup**. The help program **System Information** can also be helpful as it gives you detailed information about your system configuration. You can also find these programs in **Accessories** ⇒ **System Tools** too.

System Restore

Windows® 7 provides a useful function (**System Restore**) enabling the storage of the so-called **Recovery points**.

The system remembers the current configuration as a snapshot and returns to this, if necessary. The advantage is that an unsuccessful installation can be cancelled.

Recovery points are created automatically by the system, but they can also be set manually.

You can determine and configure yourself the maximum memory taken up by this. You find this program in the program file under **Accessories** ⇒ **System Tools**.

We recommend setting a **recovery point** before installing new software or drivers. At this point if the system does not run properly this recovery point should enable you to return to a workable configuration without deleting newly created documents. In the next paragraph you will find your options for the repair of an incorrect installation.

Correction

Windows® 7 includes various functions ensuring that the PC as well as the installed applications and devices work correctly.

These functions assist you in solving the problems which might occur by adding, deleting or replacing files required for the functionality of the operating system, the applications and devices. The recovery function or functions you use depend on the type of occurring problem or error. For detailed information refer to the Windows help.

Windows® Update

Windows Update is the online updating of Windows. Use Windows Update to download elements such as security updates, important updates, the newest help files, drivers and Internet products from the Internet.

The website is regularly augmented by new content, so that you can download the newest updates and error corrections at any time, to protect the PC and guarantee its functioning.

Windows Update will search through the PC and provide a list of individual updates especially for the configuration of your PC.

Each update that Microsoft regards as important for the operation of the operating system, programs or hardware components will be classified as an "important update" and automatically selected for installation for you.

Important updates will be provided to remove known problems and to protect the PC against known security risks.

Carry out four simple steps, to download the updates needed and to keep your computer on the current status of technology:

- ▶ Click on **Start** .
- ▶ Click on ▶ **All Programs**.
- ▶ Open  **Windows Update**.
- ▶ Click on **Check for update**.
- ▶ Click on **Add** to select the desired update and to add it to the updates to be installed, while you are searching through the available updates in each category. You can also read a complete description of each individual element by clicking on the **Read further** Link.
- ▶ Click on **Check and install updates**, when you have selected all the desired updates, and then click on **Install now**.

Windows Update Information for Data Security

Windows Update needs certain information about the respective PC, so that a suitable list with updates can be provided for you. This information will include the following:

- Version number of the operating system
- Version number of Internet Explorer
- Version numbers of additional software programs
- Plug & Play identification key of the hardware devices

Windows Update will stand up for the protection of your private data and will not record your name, address, email address or other forms of personal data. The information collected will only be used during the time that you are visiting the website. It will also not be stored.

The update can only be executed via the Internet. Ensure that you are on-line with your PC when downloading the updates.

System Restore

If your system is not functioning properly, you should use the Application Support Disc to restore your system.

Limits of the Recovery

- Changes made to the original configuration (RAS, Desktop or Internet settings) and installed Software will be ignored by this Recovery and will not be reloaded.
- Driver Updates or hardware installed by you will be ignored by this Recovery.

Carrying out a Restore

- ▶ Remove any mass storage devices you may be using (memory cards, USB sticks, etc.).
- ▶ Switch on the PC.
- ▶ Press the corresponding key when you see the message **Press F11 to run recovery**.
After a few seconds, the message **Windows is loading files** will appear. Wait until the files are loaded. The **Power Recover** menu will then appear.
- ▶ Select the language of the restoration menu.
- ▶ Click on **Next**.
- ▶ You may now choose between two forms of restoration:
 - **Restore to HDD – no backup of user data**
All data on the notebook are irretrievably erased, restoring delivery condition.
 - **Restore to HDD – with backed up user data**
Delivery condition is restored and all user data under **C:\User** are **preserved**.



ATTENTION!

When using the option with backed up user data, the restoration procedure takes a long time. Data are only preserved if they are located in the c:\Users folder. All other data will be erased. For this reason, you must perform regular backups on external data carriers. We will not be liable for data loss and/or consequential damages.

- ▶ Click on **Next** and follow the further instructions, which will appear on the screen, to restore the delivery condition.

FAQ – Frequently Asked Questions

-  Do I still have to install the enclosed discs?
-  No. Basically all programs are already preinstalled. The discs are only intended as backup copies.
-  Where can I find the drivers necessary for my PC?
-  The drivers are on the second partition of the hard drive, in the Drivers and Tools directories.
-  What is the Windows activation?
-  Your operating instructions include a chapter about this subject.
-  When do I have to activate Windows?
-  Your software has been preactivated in the factory. An activation will only be required, if ...
 - ... several components are replaced by others.
 - ... you installed a new motherboard.
 - ... a different BIOS version has been installed.
 - ... you install the software on to another computer.
-  When is the recovery of the factory setting recommended?
-  This method should be chosen as the last resort. Read chapter “System Restore” concerning the possible alternatives.

Customer Service

Troubleshooting

Errors can have simple causes, but sometimes they are caused by faulty equipment. We would like to give you some ideas to solve common problems. Should these instructions not lead to success, please feel free to call us.

Localise the Cause

Visibly check all cables and connections. Should all lights be off, check whether all equipment is supplied with power.

- Check power points, power cable and all power switches.
- Switch off the PC and check all cable connections. Check the connections to peripherals. Do not exchange cables, even though they may look similar. The polarity in those cables may be different. When it is confirmed that the computer has power and all connections are correct, turn the computer on again.

Frequent use of the programs **Disk Defragmenter** and **Disk Cleanup** will help you to avoid problems with your operating system.

The tool **System Information**, available in the program folder **System Tools** is also very useful.

Errors and Possible Causes

The monitor is blank.

- ▶ Confirm that the system is not in stand-by mode. Press any key on the keyboard to test this out.

Wrong Date and Time:

- ▶ Click the clock on the taskbar and correct the date and time.

After a system restart a new drive letter is assigned to the cards in the card slots.

- ▶ This can happen, when the card reader re-initializes the slots during a system start. New IDs might be assigned, which can lead to new drive letters for some cards.

No data can be accessed from the optical drive.

- ▶ Check whether the disc is inserted correctly.
- ▶ Is the optical drive displayed in Windows Explorer? If so, test another disc.

The mouse does not work.

- ▶ Check the cable.

There is not enough room on the HDD.

- ▶ Audio or video recordings need a great deal of memory (between 1 and 2 GB/hour). Safeguard files that you do not need on external media, such as DVD/CD-Rs or hard drives or other external media (e.g. **HDDrive 2Go super speed**).

The PC does not start up.

- ▶ If all cable connections are correct, then try to reset the power supply of the PC. Set the power switch at the rear of the PC to position 0 (OFF). Now press down the main switch at the front of the PC for 10 seconds. Wait 5 more seconds and the restart the PC.

No icons on the Desktop.

- ▶ Make sure that you have only connected your monitor with a data cable.

Additional Support

If the suggestions in the above section have not solved your problem, please contact the service hotline and we will attempt to help you solve the problem. Before you contact the Technology Centre, however, please have the following information available:

- How is your computer configured?
- What additional peripherals do you use?
- What messages, if any, appear on your screen?
- What software were you using when the error occurred?
- What steps have you already undertaken to solve the problem?
- Have you upgraded or removed drivers or hardware?
- Can you manually repeat the problem?
- If you have been given a customer number previously, please quote this.

Driver Support

This PC has been extensively tested in our laboratories with a large number of compatible devices. It fulfils all required standards and complies with the standard "Designed for Windows", which certifies utmost compatibility.

However, often the software drivers for individual components are updated from time to time. This is a regular process provided by the manufacturer to mend possible compatibility problems that may occur with components (e.g., programs or hardware) that were not tested at the time of your PC's manufacture. Driver updates and the latest information on your product are available on the Internet.

Visit MEDION on the Web at www.medion.com

Transporting the PC

Please observe the following guidelines when transporting the PC:

- To avoid damage during transport, store the PC in its original packaging.

Cleaning and Care

The lifetime of the PC can be extended by taking the following measures:



WARNING!

Do not open the housing of the network adapter. When the housing is open there is a risk of electric shock. It does not contain any parts requiring maintenance.

There are no user-serviceable or user-cleanable parts inside the PC housing.

- Before cleaning, always pull the mains cable and all connection cables. Clean the PC with a damp, lint-free cloth.
- Dust can clog the air vents, leading to overheating and malfunctioning. Check at regular intervals (about every 3 months) that all air vents permit sufficient air circulation. Use a vacuum to keep the air vents clear of dust. If your device regularly sucks in a great deal of dust, we also recommend that the interior of the PC housing be cleaned by a professional.
- Do not use solvents, caustic or volatile cleansers.
- Before cleaning, always remove the power plug and all connecting cables. Clean the PC with a damp, lint-free cloth. Do not use any solvents, corrosive or gaseous cleaning agents. Do not use CD-ROM cleaning discs or similar products that clean the lens of the laser to clean your CD- /DVD-drive.

Repairs

Please contact the MEDION Australia Helpdesk on 1 300 884 987 if you have any problems with your PC. ONLY have repairs completed by our authorised service centre.

Contact you the MEDION Australia Helpdesk on 1 300 884 987 when...

- Liquid has got into the PC
- The PC does not operate properly
- The PC is dropped or the housing is damaged.

Notes for Service Engineers

- Before opening the housing, disconnect the PC from all power sources and remove any connecting cables. If the PC has not been disconnected from the power outlet before being opened, there is a danger to life through electric shock. There is also a risk of damage to the components.
- Internal components of the PC may be damaged by electrostatic discharge (ESD). Carry out system upgrades and changes in an ESD-protected workshop. If no such workshop is available, wear an antistatic wrist strap or touch a highly conductive metal object. MEDION can repair damage sustained by inappropriate handling for a fee.
- Use only original spare parts.



CAUTION!

Lithium batteries cannot handle intense pressure, high temperatures or fire. There is a danger of explosion if replaced incorrectly. Replace batteries with a compatible type as recommended by the manufacturer.

Lithium batteries are hazardous waste and require proper disposal. Contact the Service Centre for additional information on battery disposal.

Notes on Laser Radiation

- Laser devices of Laser Class 1 to Laser Class 3b may be used in the PC. Where the PC housing remains closed, the device meets the requirements of Laser Class 1.
- By opening the PC housing you will gain access to laser devices of up to Laser Class 3b.

When removing and/or opening laser devices, the following guidelines must be observed:

- The CD-ROM-/CDRW-/DVD-drives installed contain no user-serviceable parts.
- Only the manufacturer should perform repairs to the CD-ROM-/CDRW-/DVD-drives.
- Do not look into the laser beam, even while wearing optical protection.
- Do not allow yourself to be exposed to the laser beam. Avoid exposure of the eyes or skin to direct or stray radiation.

Recycling and Disposal



Packaging

To avoid damage during transport, the PC is stored in protective packaging. The packaging is produced mostly from materials which can be disposed of in an environmentally friendly manner and therefore can be professionally recycled.



Device

At the end of its life, the appliance must not be disposed of in household rubbish. Enquire about the options for environmentally-friendly disposal.



Batteries

Do not dispose of used batteries in the household rubbish! They must be deposited at a collection point for used batteries.

Should you have any questions concerning the disposal please contact your dealer or our service center.

FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Shielded interface cables, if any, must be used in order to comply with the emission limits.

Index

A	
All programs	24
Ambient Temperature.....	12
Autorun.....	52

B	
BIOS Setup	55

C	
Cabling.....	15
Card Reader.....	35
Care.....	67
Carrying out a Restore	62
CD-ROM.....	32
CF.....	35
Cleaning	67
Cleaning agents.....	67
Compact Flash.....	35
Connecting	
eSATA Devices	18
External Hard Drives.....	31
Headphones	19
Microphone.....	19
Monitor	16
Power Supply	21
PS/2 Devices	21
Sound Source /Audio Input	21
Speakers/Audio Output	20
USB Devices.....	17
Control Panet	48
Customer Service.....	64

D	
Data and System Security	58
Data Security	10
Directories	30
Disc Drive	32
Display	
Appearance and Personalisation	36
Driver Support.....	66

E	
Ergonomics.....	13
Errors and Possible Causes	65

F	
FAQ.....	63
FCC Compliance Statement	70
Front Connectivity	16

G	
Getting Started	22

H	
Hard Drive.....	29
Hotline.....	66

I	
IBM® Microdrive.....	35
Icons	24
Included with Your PC	11
Installation of Software	52

K	
Kaspersky Internet Security	56
Keyboard	28
Keys	28

L	
Laser Radiation.....	69
License Agreement.....	23
Localise the Cause.....	64

M	
Maintenance	67
Maintenance Programs	58
Memory Stick.....	35
MMC	35
Mouse.....	27
MultiMediaCard.....	35

N	
Network	40
LAN Access Point.....	41
Troubleshooting	42
What is a Network?	40
Wireless LAN	41

O	
On/off Switch	22
Operation	
Keyboard	28
Mouse	27
Operational safety	
Data Security	10
Ambient Temperature.....	12
Cabling.....	15
Set-up Location.....	12
Optical Disc Drive	32

P	
Power On	22
Program bar	24

R	
Recycling and Disposal	69
Repairs.....	68

S	
SD	35

Secure Digital.....	35
Service Engineers	68
Set-up Location	12
SmartMedia	35
Software	43
Software Uninstallation	53
Sound System	37
Standards	
FCC Compliance Statement	70
Start button	24
System Restore.....	59

T	
Transporting	67
Troubleshooting	59, 64

U	
USB Port.....	39

W	
Windows Activation	54
Windows Media Center.....	49
Windows [®] 7	
User Account Control.....	47
Control Panel	48
Getting Started.....	46
Help and Support.....	45
News.....	43
Windows [®] Update.....	60
Wireless LAN	41



MEDION Electronics Ltd.

120 Faraday Park
Faraday Road
Dorcan
Swindon SN3 5JF
Wiltshire, UK

Phone: 0871 37 61 020

(Costs 7p/min from a BT landline, mobile costs maybe higher)

Phone EIRE: 1-800-992508 (free phone)

Fax number: 01793 715716

To contact us by email, please visit our
'Service and Support' section of our website at
www.medion.co.uk

MSN 2005 2398